



MC450 CENTER JACK #37-9841

Thank you for purchasing this K&L Product.

Please inspect this unit for damage/missing parts prior to use.



NOTE: USE THIS JACK ON A FLAT SURFACE ONLY.

- 1) Slide jack under bike and raise until jack touches frame rails or flat area of engine case. Do not use jack if there is insufficient contact area. This could cause bike to fall.
- 2) Once jack has been positioned, slowly raise bike to desired height. If either one of the wheels is higher than the other, the bike is unstable. Lower and reposition the jack.

Optional adapters:

36-9830 Rubber Pad.

37-9896 Adapter Plate, zinc plated--This plate mounts onto the MC450 and features 4 adjustable posts. Fit's MC450's mfg. 1999 on.

37-9894 Adapter Post Kit--Provides for width and height adjustment. Kit includes 1.5" and 3" posts. Fit's MC450's mfg. 1999 on with no rubber pad.


37-9134 MC450 Repair Kit--Fit's MC450's mfg. 1999 on.

37-9135 MC450 Retro Fit Repair Kit--Fit's MC450's mfg. before 1999.

37-9888 Post adapter kit with rubber pad installed

37-9889 Socket

37-9534 Sport Jack

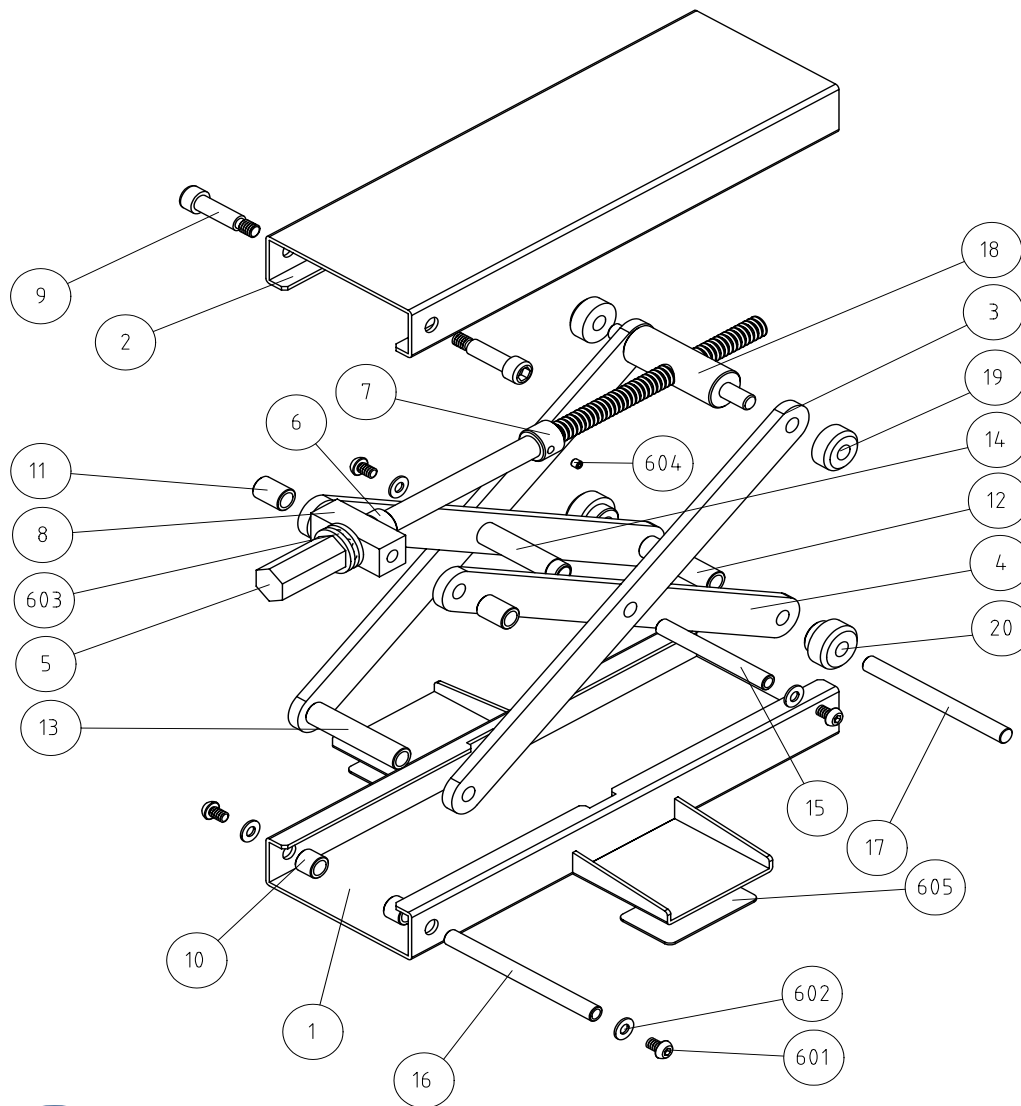

K&L SUPPLY CO.
PART NO. 37-9841

NO.	DESCRIPTION	QTY	NO.	DESCRIPTION	QTY
1	FRAME (LOWER)	1	14	SPACER (E)	1
2	FRAME (UPPER)	1	15	PIN (A)	1
3	LINK (A)	2	16	PIN (B)	1
4	LINK (B)	2	17	GUIDE ROLLER SHAFT (LOWER)	1
5	SCREW	1	18	GUIDE ROLLER SHAFT (UPPER)	1
6	STOPPER (A)	1	19	GUIDE ROLLER (UPPER)	2
7	STOPPER (B)	1	20	GUIDE ROLLER (LOWER)	2
8	SCREW FIXING BRACKET	1			
9	ALLEN BOLT	2	601	ROUND-HEAD ALLEN BOLT - M8 X 12	2
10	SPACER (A)	2	602	FLAT WASHER - Ø8	2
11	SPACER (B)	2	603	THRUST BEARING - 51203	1
12	SPACER (C)	1	604	NON-HEAD ALLEN BOLT M6 X 6	2
13	SPACER (D)	1	605	RUBBER PAD	2